


FLARE FITTING

Always Do This



NYS Clean Heat
Supported

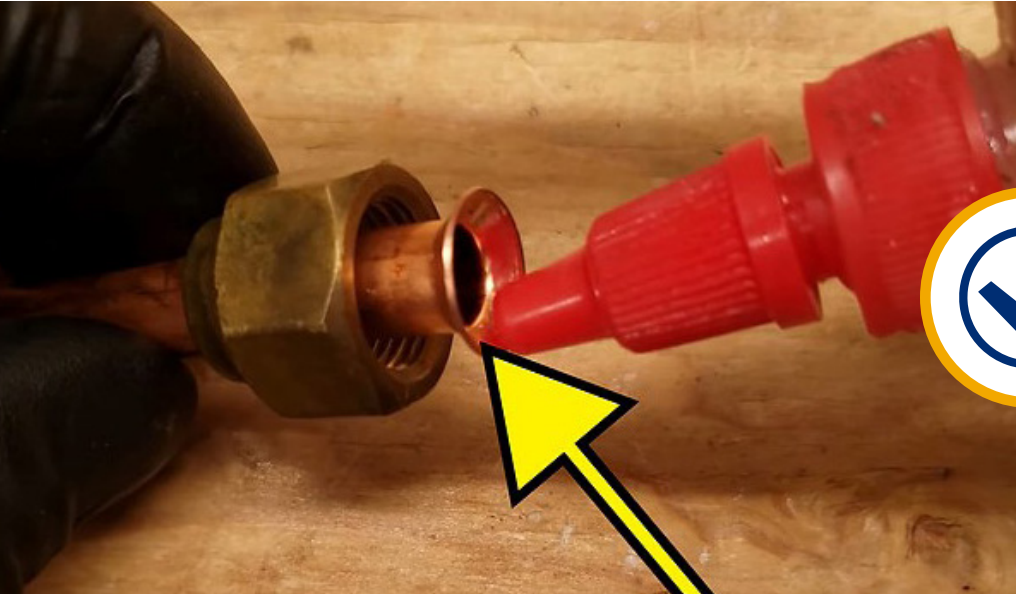

Apply **compatible** refrigerant oil to the **face** and **never the threads**



Always **tighten** flare nut to **manufacturer specifications** with a **torque wrench**



Always perform a **leak test before loading** the system with refrigerant